

MAIDOMIST



AUTOMATIC AIR VALVES

For All Hot Water and Solar Heating Systems

Correct problems and avoid trouble by installing these float-operated Auto-Vents. They vent air from mains, solar panels, pipe lines, boilers, unit heaters, chillers, convectors, radiant panels, coils, baseboard and free-standing radiation.


6 SERIES AUTO-VENTS

The No. 66, 67, 68 Auto-Vents are float-operated vents for use on convector radiators, baseboard radiation and radiant panels. These are designed to be used in space that is limited and can be installed in trouble spots previously neglected or improperly vented. No air chamber is required. The No. 66, 67, 68 Auto-Vents are designed for systems with pressures up to 50 lbs.

No. 66 and 67 Auto-Vents can be used with the No. 9AS Shortstop Automatic Shut-off.

For safe waste use the No. 7A Connector.

Approved for use in 50/50 glycol systems

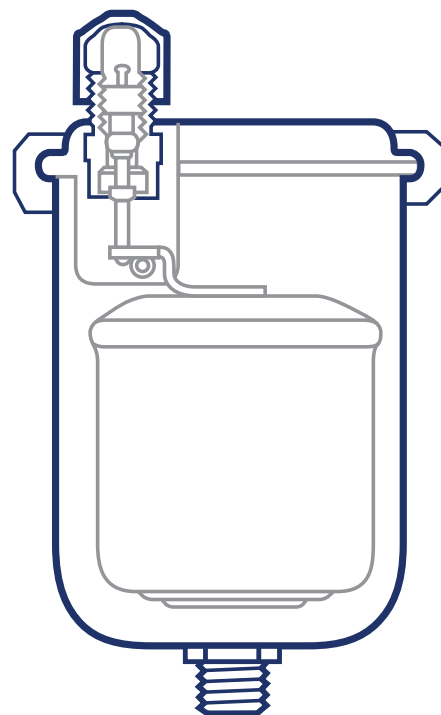

NO. 67 AUTO-VENT

| PRODUCT NUMBER | MOUNT | CONNECTION | MAX. VENTING PRESSURE | SIZE | MATERIAL |
|----------------|-------------------|---------------------------|-----------------------|------------------|---|
| No. 66 | Vertical mounting | 1/8" I.P. male connection | 50 lbs. | 2 5/8" x 1 1/4" | Copper finish with a polished brass cover |
| No. 67 | Vertical mounting | 1/8" I.P. male connection | 50 lbs. | 3 3/4" x 1 9/16" | Copper finish with a polished brass cover |
| No. 68 | Vertical mounting | 1/4" I.P. male connection | 50 lbs. | 4" x 1 9/16" | Copper finish with a polished brass cover |



3196 N Kennicott Ave, Arlington Heights, IL 60641
(773) 685-7300 • contact@maidmist.com