

# PRO<sup>1</sup> T715

## Pro1 Technologies, Inc.

1111 S. Glenstone Ave., Suite 2-100  
Springfield, MO 65804

Toll-Free: 888-776-1427 Web: [www.pro1iaq.com](http://www.pro1iaq.com)  
Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Contact Us	4
Warranty Registration	4




### Caution:

Equipment damage hazard  
Do not operate the cooling system if the outdoor temperature is below 50° F (10° C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.


# OPERATING MANUAL THERMOSTAT QUICK REFERENCE

## Getting to know your thermostat

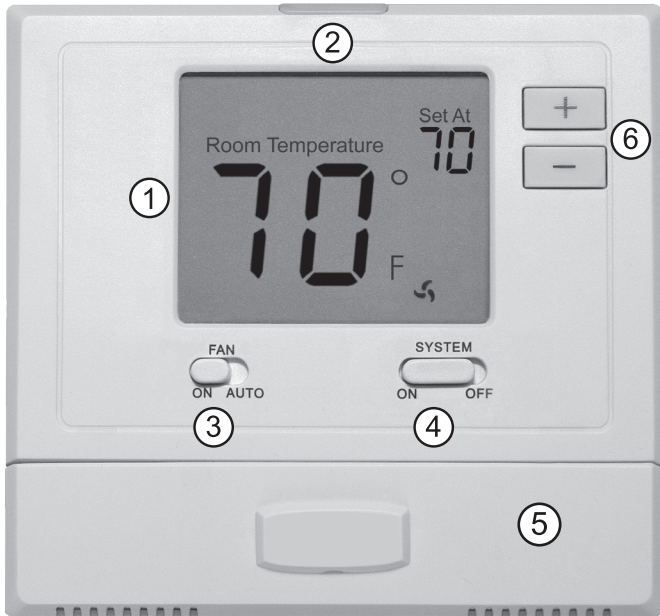

- ② Glow in the Dark Light Button
- ③ Fan Switch
- ④ System Switch
- ⑤ Easy Change Battery Door
- ⑥ Temperature Setpoint Buttons

### ① LCD

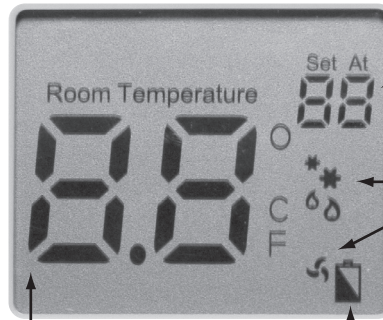

Low Battery Indicator:  
Replace batteries when indicator is shown.

Indicates the current room temperature.

Displays the user selectable setpoint temperature.

System operation indicators:

\*\* COOL    🔥 HEAT    🌀 FAN

The COOL, HEAT or FAN icon will display when the COOL, HEAT or FAN is on. NOTE: The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.




### Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable.


NOTE: In applications where the thermostat will see temperatures below 40 degrees it is recommended that 1.5V AA lithium batteries be used instead of alkaline for increased battery life. (Extreme temperatures decrease the life of Alkaline batteries.)

## Battery door information

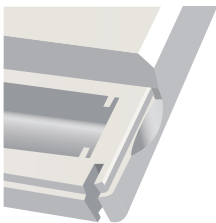


Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.

Insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

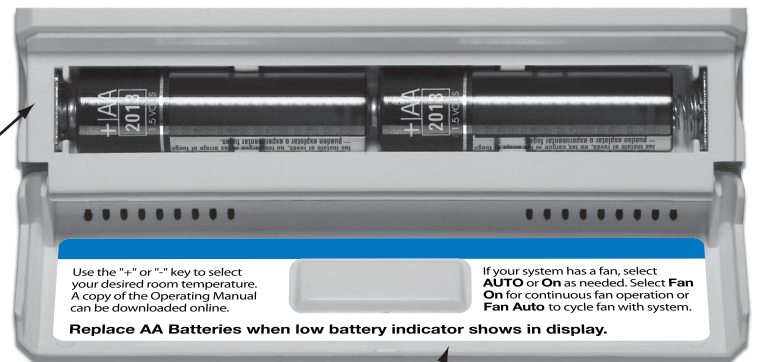


Simple operating instructions are found on the back of the battery door.

## Easy to use controls

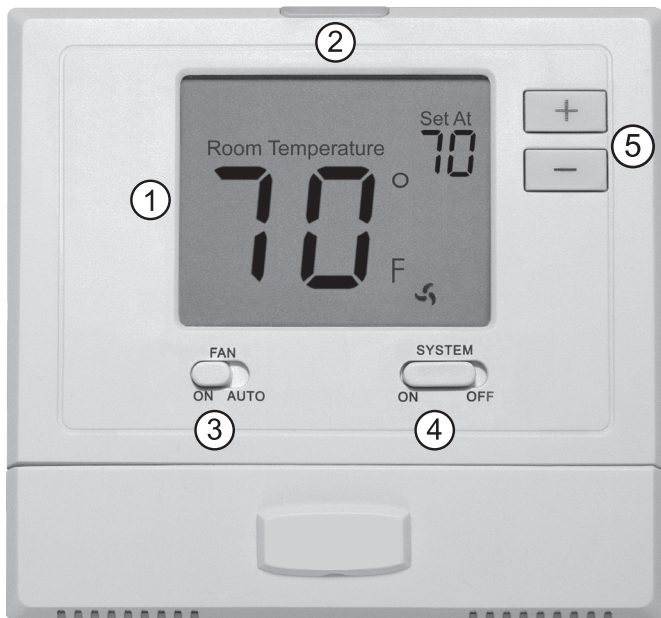

### Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

- ① **LCD Display:**  
See page 2 for details about this display read out.
- ② **Glow in the Dark Light Button:**  
The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.
- ③ **Fan Switch:**  
If your system has a fan, select ON or AUTO. ON will run the fan continuously. AUTO will cycle the fan on only when the heating or cooling system is on.
- ④ **System Switch:**  
Selects the operation mode of your HVAC system. Selecting ON turns on either the heating or cooling. Selecting OFF turns off heating or cooling. Your thermostat is configured for either heat or cool.
- ⑤ **Temperature Setpoint Buttons:**  
Press the + or - buttons to select the desired room temperature.

## Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to our website, select warranty registration and fill out a short registration form.
- or -
- ② Complete the form below and mail it to the address shown.



---

## Warranty Registration:

Name: \_\_\_\_\_

Thermostat Model: \_\_\_\_\_

Address: \_\_\_\_\_

Date Installed: \_\_\_\_\_

City: \_\_\_\_\_

Complete form and mail to:

State: \_\_\_\_\_

### Thermostat Warranty Registration

Zip: \_\_\_\_\_

1111 S. Glenstone  
Suite 2-100  
Springfield, MO 65804