

READ AND SAVE THESE INSTRUCTIONS

Safety & Installation Instructions



TABLE OF CONTENTS

INSTALLATION

Thermostat installation location recommendations	2
Thermostat mounting	2
Equipment control module installation location recommendations	2
Equipment control module mounting	2
Thermostat wiring	3
Remote temperature sensor (optional)	3
Equipment control module wiring	4
Outdoor temperature sensor (included)	5
Optional wireless outdoor temperature and humidity sensor	5
Return air temperature sensor (optional)	6
Leaving air temperature sensor (optional)	6

HVAC WIRING DIAGRAMS

Conventional heat/cool single transformer	7
Conventional heat/cool two transformer	7
Heat pump single transformer	8
Heat pump two transformer	8

INDOOR AIR QUALITY WIRING DIAGRAMS

Indoor Air Quality wiring with separate transformers	9
Indoor Air Quality wiring with a single transformer	9

POWER & RESET OPTIONS

Power and reset options	10
-------------------------	----

SETUP & TESTING

Installer setup wizard	10
HVAC installer system settings tables	10-12
General system settings table	10
Thermostat system settings table	11-12
Indoor Air Quality system settings tables	13-16
Humidifier system settings table	13-14
Dehumidifier system settings table	14
Air cleaning system settings table	15
Fresh air system settings table	15-16
Installer system test	16
Wi-Fi setup	16

REFERENCES

Quick reference to controls & display	17-18
Thermostat features	18
Troubleshooting	19
Specifications	20

INSTALLATION


THERMOSTAT INSTALLATION LOCATION RECOMMENDATIONS

Thermostat should be mounted:

- On an interior wall, in a frequently occupied space.
- Behind doors, in corners or other dead air spaces.
- In direct sunlight, near lighting fixtures, or other appliances that give off heat.
- Approximately 5' above floor.
- At least 18" from outside wall.
- Thermostat can be mounted to a vertical junction box.

THERMOSTAT MOUNTING

1. Remove the rear mounting plate from the thermostat.
2. Pull wires through the opening in the rear mounting plate.
3. Position and level the mounting plate of the thermostat on wall and mark the hole locations with a pencil.
4. Drill 1/4" holes and insert supplied anchors (drywall only).
5. Place mounting plate over anchors, insert and tighten screws.
6. Seal wire entry holes to prevent drafts affecting temperature readings.

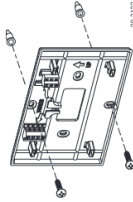

963172

EQUIPMENT CONTROL MODULE INSTALLATION LOCATION RECOMMENDATIONS

Note: Installer must touch a grounded metal object before handling the equipment control module to avoid potential damage due to electrical discharge.

Equipment control module should be mounted:

- In a location where the temperature will not exceed 158°F (70°C) or drop below 32°F (0°C).

Do not mount equipment control module:

- On foundation walls or on the HVAC equipment or ductwork. These locations can cause moisture to condense on the equipment control module.

EQUIPMENT CONTROL MODULE MOUNTING

The equipment control module has the following features to simplify mounting and wiring and provide for a clean and neat installation.

- Six (6) mounting holes. One on each corner and two centered top and bottom. Any combination of these holes may be utilized. Mount the equipment control module using 2 to 4 #8 screws appropriate for the mounting surface substrate. (See **Figure 2**.)
- Wires can be routed through the top, bottom, sides or back.
- Nylon wire ties can be used to secure wires in 10 places.

Installation Steps

1. Select mounting location.
2. Pull from bottom to remove front cover. (See **Figure 1**.)
3. Mount base using 2 to 4 #8 screws (field supplied).

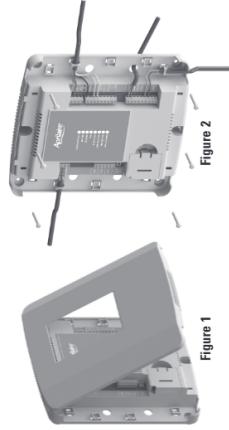


Figure 1

Figure 2


INSTALLATION

THERMOSTAT WIRING

Wire specifications:
18-24 gauge thermostat wire

Installation notes:

- Ensure power at the HVAC equipment is off.
 - Loosen screw terminals, insert stripped wire and re-tighten.
 - Push the excess wire back into the opening and plug the wall opening to prevent drafts.
- 1 – Connection to terminal 1 at equipment control module
 - 2 – Connection to terminal 2 at equipment control module
 - 3 – Connection to terminal 3 at equipment control module
- T1 & T2** – Remote temperature sensor (optional)

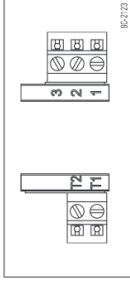

963173

REMOTE TEMPERATURE SENSOR (OPTIONAL)


A remote temperature sensor can be used for control if the thermostat is to be mounted in a concealed location or a remote sensor can be averaged with the thermostat sensor to control a large space. An 8051 flush mount or 8053 surface mount remote temperature sensor can be attached to the T1 and T2 terminals and mounted in a recommended area. The remote sensor must be enabled in the installer setup menu, and once enabled will override or be averaged with the thermostat's internal temperature sensor, based on the setting.

Remote temperature sensor should be mounted:

- On an interior wall, in a frequently occupied space.
- Approximately 5' above floor.
- At least 18" from outside wall.
- Using less than 300' of wire.


Do not mount remote sensor:

- Behind doors, in corners or other dead air spaces.
- In direct sunlight, near lighting fixtures, or other appliances that give off heat.
- On an outside or unconditioned area wall.
- In the flow of a supply register, in stairwells, or near outside doors.
- On a wall with concealed pipes or ductwork.
- Near 120 VAC lines.

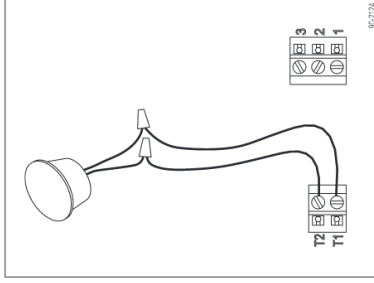

963174

EQUIPMENT CONTROL MODULE WIRING

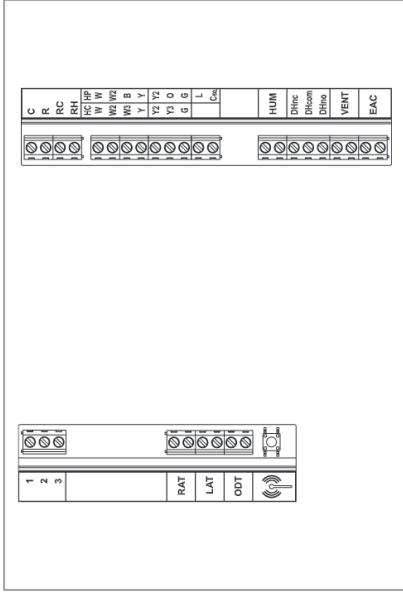

Wire specifications:

18-24 gauge thermostat wire

Installation notes:

- Ensure power at the HVAC equipment is off.
- Loosen screw terminals, insert stripped wire and re-tighten.
- Use zip tie to route wiring through the wiring channels.

- 1 – Connection to terminal 1 at thermostat
- 2 – Connection to terminal 2 at thermostat
- 3 – Connection to terminal 3 at thermostat

- RAT** – Return air temperature sensor (optional)
LAT – Leaving air temperature sensor (optional)
ODT – Outdoor temperature sensor (included)

C – 24VAC common

R – 24VAC

RC – 24VAC cooling

RH – 24VAC heating

W – First stage heat (conventional)/auxiliary (heat pump)

W2 – Second stage heat (conventional)/ auxiliary (heat pump)

W3 – Third stage heat (conventional)/reversing valve (heat pump)

Y – First stage cooling (conventional)/first stage compressor (heat pump)

Y2 – Second stage cooling (conventional)/second stage compressor (heat pump)

Y3/O – Third stage cooling (conventional)/reversing valve (heat pump)

L – System fault indicator (heat pump only) (optional)

Cca – 24VAC common from heat pump for system fault indicator (optional)

HUM – Humidifier

DHco & DHcom – Normally open dehumidifier control

DHnc & DHcom – Normally closed dehumidifier control

VENT – Ventilation

EPAC – Electronic Air Cleaner

OUTDOOR TEMPERATURE SENSOR (INCLUDED)

Outdoor temperature can be measured by installing an 805Z sensor to the ODT terminals and enabling the outdoor sensor in the installer setup menu. When an outdoor sensor is installed, the features below will be enabled.

In heat pump mode the outdoor temperature sensor can be used to efficiently utilize an air source heat pump:


- When the outdoor temperature is less than the Low Balance Point, the heat pump will be locked out and only auxiliary heating will be used to provide heating.
- When the outdoor temperature is higher than the High Balance Point, the auxiliary heating will be locked out and only the heat pump will be used to provide heating.

Indoor Air Quality functions can use the outdoor temperature sensor to:

- Control humidification setpoint based on outdoor temperature to prevent condensation
- Lock out humidification for temperatures over 60°F or below -30°F.
- Lock out ventilation based on high and/or low outdoor temperatures.
- Display outdoor temperature on thermostat.



Outdoor temperature sensor should be mounted:

- On side of building out of direct sunlight (north side recommended).
- Above snow line.
- At least 3' away from exhaust vents and condensing lines.
- Using less than 300' of wire.
- Do not route wires along 120 VAC lines.

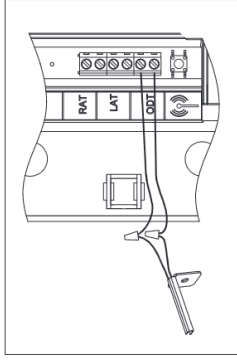

OPTIONAL WIRELESS OUTDOOR TEMPERATURE AND HUMIDITY SENSOR

For installations where it is difficult to wire the included 805Z outdoor temperature sensor, a Model 805S wireless outdoor sensor can be used. The Model 805S module has two radio units, one that is placed on the equipment control module as shown below, and a second radio that is placed outside. See the Model 805S installation instructions for detailed directions regarding installation.

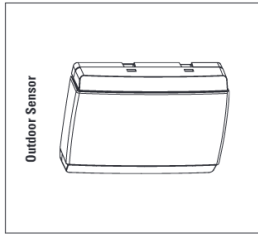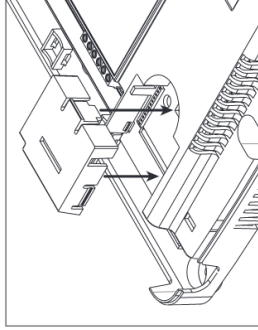


INSTALLATION

RETURN AIR TEMPERATURE SENSOR (OPTIONAL)

Return air temperature can be measured by attaching an 8052 sensor to the RAT terminals. The return sensor must be enabled in the installer setup menu. The return air temperature sensor provides protection in the event that the equipment control module loses connection with the thermostat. In the event that the thermostat connection is lost, the equipment control module will use the return air temperature sensor to maintain a temperature greater than 40°F and less than 100°F.

1. Locate the ApriAire Model 8052 sensor in the return trunk.
2. Mount the sensor according to the installation instructions provided with the sensor.
3. Wire the sensor to the equipment control module RAT terminals.

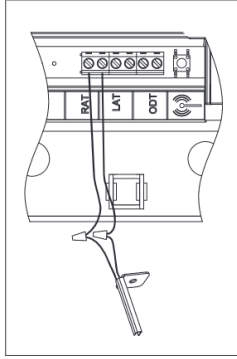



LEAVING AIR TEMPERATURE SENSOR (OPTIONAL)

Leaving air temperature can be measured by attaching an 8052 sensor to the LAT terminals. The leaving air temperature sensor measurement is displayed during the installer test for diagnostic purposes.

IMPORTANT


Do not mount the sensor in direct line-of-sight of the heat exchanger, cooling coils, or UV lights as this may cause the sensor to report false temperature readings.

1. Locate the ApriAire Model 8052 sensor in the supply trunk, after the heat exchanger and cooling coils. (See shaded areas in figure below.)
2. Mount the sensor according to the installation instructions provided with the sensor.
3. Wire the sensor to the equipment control module LAT terminals.

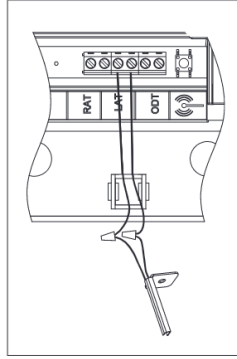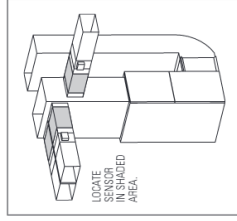


HVAC WIRING DIAGRAMS

CONVENTIONAL HEAT/COOL SINGLE TRANSFORMER (USE JUMPER)

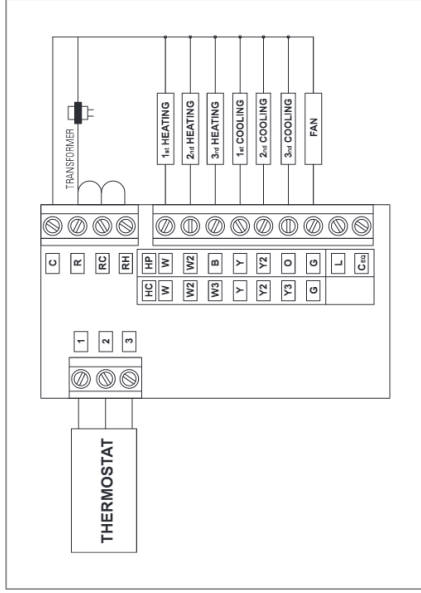


CONVENTIONAL HEAT/COOL TWO TRANSFORMER (REMOVE JUMPER)

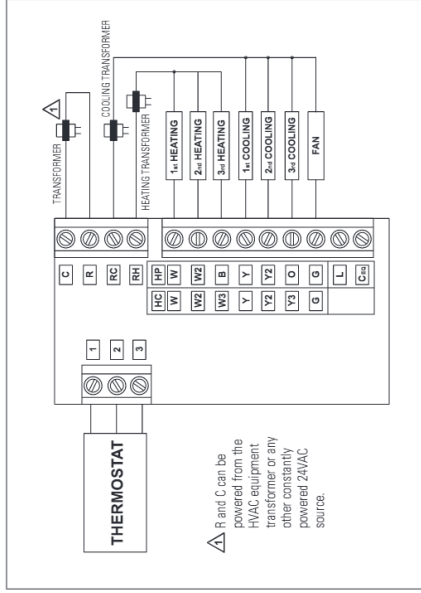


HVAC WIRING DIAGRAMS

HEAT PUMP SINGLE TRANSFORMER (USE JUMPER WIRE)

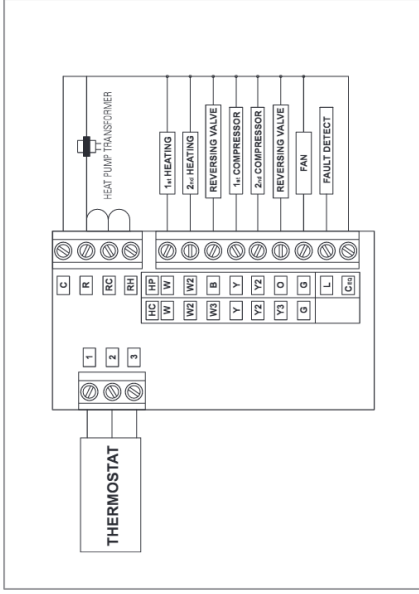

INDOOR AIR QUALITY WIRING DIAGRAMS


INDOOR AIR QUALITY WIRING WITH SEPARATE TRANSFORMERS

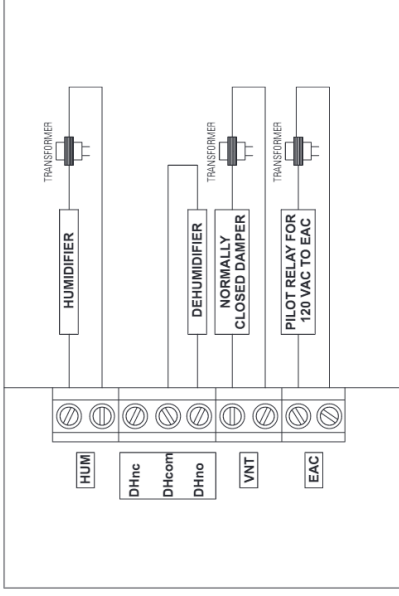


Note: Outputs are 24VAC dry contact. Refer to individual product installation instructions for more details.

HVAC WIRING DIAGRAMS

HEAT PUMP TWO TRANSFORMER (REMOVE JUMPER WIRE)

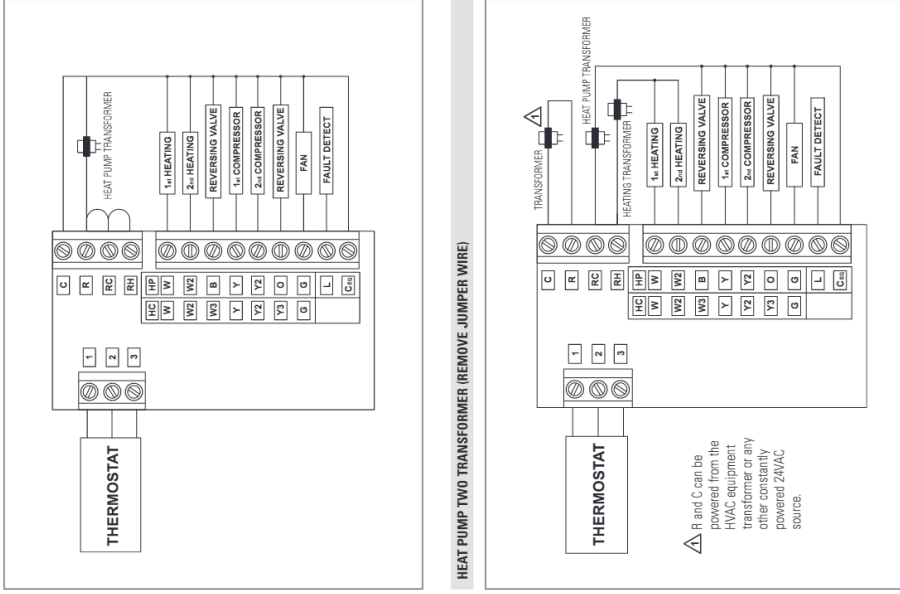

INDOOR AIR QUALITY WIRING WITH A SINGLE TRANSFORMER

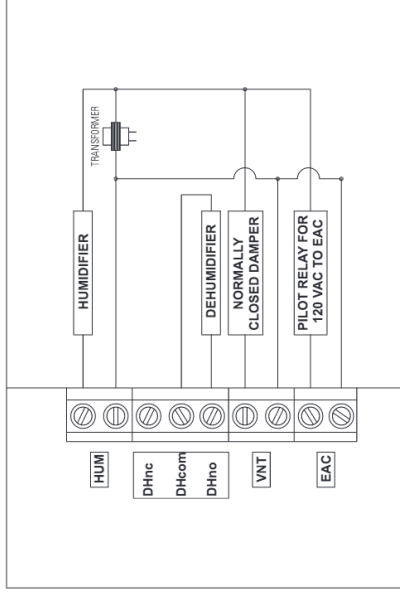

Note: Outputs are 24VAC dry contact. Refer to individual product installation instructions for more details.

POWER & RESET OPTIONS

The equipment control module is powered from 24VAC. The thermostat is powered from the equipment control module. In the case of power loss the thermostat will maintain the clock for 24 hours. The thermostat has a memory backup that saves the thermostat settings in case of power interruption.

The factory reset is located in the Installer Tools option of the Installer Menu. See Installer System Settings section for details.

SETUP & TESTING


INSTALLER SETUP WIZARD

The first time the thermostat is powered up (or after a factory reset) it will enter the installer Setup Wizard. All installer settings can be set in this process. The installer settings are also accessible in the MENU by pressing the Contractor Info button for 10 seconds.

Import USB settings will be the first screen that you see (the button will be grayed out until a USB drive is inserted).

- If you have a USB drive with installer setup files on it, insert it into the USB connector (on the lower left corner) to import a file.
- Or press skip to proceed with the installer Setup Wizard.

Note: Installer setup files can be created from the Export Setup option found under installer Menu > Installer Tools > Export Setup.

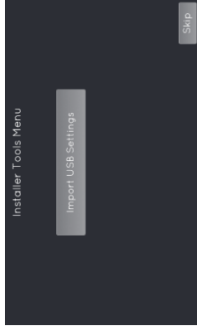

HVAC INSTALLER SYSTEM SETTINGS TABLES

The following tables contain the system settings and their details. Default settings are shown in **bold**. Some settings are only available dependent upon the value of other settings.

General System Settings Table

System setting	Description	Factory default setting (bold) and setting range
Installer Temperature Scale	This selection only affects the installer setup menus.	Fahrenheit Celsius
Contractor Information Input	Enter contractor's contact information.	Company, Phone, Email, Web

SETUP & TESTING

HVAC INSTALLER SYSTEM SETTINGS TABLES (CONTINUED)

Thermostat System Settings Table

System setting	Description	Factory default setting (bold) and setting range
Equipment Type	Note: Equipment Type related settings will return to defaults if this is changed.	Heat/Cool Heat Pump
Control Setup	Used to lockout heating or cooling outputs. (Heat/Cool mode only)	Heat & Cool Heat Only Cool Only
Heat Pump Auxiliary Type	Selects auxiliary type. (Heat Pump mode only.)	Gas/Oil Heat Electric Heat.
Fan Control (in Heating)	Selects thermostat or equipment to control the fan in heating. (Heat/Cool mode only.)	Gas/Oil Heat Electric Heat.
Number of Compressor Stages	Select number of compressor stages. (Heat Pump mode only.)	One Two
Number of Auxiliary Heat Stages	Select number of auxiliary heat stages. (Heat Pump mode only.)	One Two
Number of Stages of Heat	Select number of heat stages. (Heat/Cool mode only.)	One Two Three
Number of Stages of Cool	Select number of cool stages. (Heat/Cool mode only.)	One Two Three
Remote Temperature Sensor Installed?	Select if the remote sensor is attached, and uses backup, or is averaged with built-in.	No Yes Yes (fallback built-in) Yes (average w/built-in)
Return Air Temperature Sensor Installed?	Select if return air temperature sensor is attached or not.	No Yes
Outdoor Temperature Sensor Installed?	Select if outdoor sensor is attached or not.	No Yes
Schedule	Enables or disables programmable schedule.	Enabled Disabled
Progressive Recovery	Enables or disables progressive recovery.	Enabled Disabled
Display Away Button?	Away allows the user to set the thermostat to a predefined schedule using single button press. The predefined setpoints can be selected in the User Settings.	No Yes
Display Heat Blast Button?	Select if the Heat Blast button is displayed.	No Yes
Blast Offset	Amount of heating when Heat Blast is initiated.	3°F (1.5°C) 4°F (2°C) 9°F (2.5°C)
Extended Fan – Heat	Extends fan operation after heat call ends.	Disabled Enabled
Extended Fan – Cool	Extends fan operation after cool call ends.	Disabled Enabled
Auto Changeover	Enable or disable Auto Changeover mode.	Disabled Enabled

SETUP & TESTING

HVAC INSTALLER SYSTEM SETTINGS TABLES (CONTINUED)

Thermostat System Settings Table (continued)

System setting	Description	Factory default setting (bold) and setting range
Deadband	Auto Changover mode deadband.	3°F (1.5°C) 2 to 9°F (1 to 4.5°C)
Auto Changover Time	Minimum time between heating and cooling calls.	4 Minutes 1 to 5 Minutes
Internal Temperature Sensor Offset	Field adjustment of controlling temperature sensors.	0°F (0°C) -4 to 4°F (-2 to +2°C)
Internal RH% Sensor Offset	Field adjustment of internal RH sensor.	0 -5 to 5
Equipment Minimum On Time	Minimum on time for heating and cooling.	2 Minutes 1 to 5 Minutes
Heating Minimum Off Time	Minimum off time for heating.	2 Minutes 1 to 5 Minutes
Compressor Minimum Off Time	Minimum off time for compressor protection.	5 Minutes 1 to 5 Minutes
Outdoor Temperature High Balance Point	Enable or disable high balance point. (Available if ODT is installed.)	Enabled Disabled
Select High Temperature Balance Point	If outside temperature is above the high balance point, the compressor is not allowed. (Available if high balance point is enabled.)	65°F (18.5°C) 0 to 65°F (-16 to 22°C)
Outdoor Temperature Low Balance Point	Enable or disable low balance point. (Available if ODT is installed.)	Enabled Disabled
Select Low Temperature Balance Point	If outside temperature is below the low balance point the compressor operation is not allowed. (Available if low balance point is enabled.)	20°F (-8°C) 0 to 65°F (-16 to 12°C)
Stage Rate	Accumulation of equipment run time in staging determination.	Enabled Disabled
Factor	1 = more rapid staging of equipment (comfort), 3 = slower staging of equipment (economy).	2 1 to 5
First Stage Differential	First stage differential.	1°F (0.5°C) 1 to 9°F (0.5 to 4.5°C)
Second Stage Differential	Second stage differential.	1°F (0.5°C) 1 to 9°F (0.5 to 4.5°C)
Third Stage Differential	Third stage differential.	1°F (0.5°C) 1 to 9°F (0.5 to 4.5°C)
Fourth Stage Differential	Fourth stage differential.	1°F (0.5°C) 1 to 9°F (0.5 to 4.5°C)
Service HVAC Reminder	The period for displaying the "HVAC Service reminder" message.	Disabled Enabled
Number of Months for Recurrence	Select number of months for displaying reminder.	12 Months 1 to 12 Months

SETUP & TESTING

INDOOR AIR QUALITY SYSTEM SETTINGS TABLES

The following tables contain the Indoor Air Quality system settings and their details. Default settings are shown in bold. Some settings are only present dependent upon the value of other settings.

The use of an outdoor temperature sensor (recommended) enables additional Indoor Air Quality functionality. Please refer to the Model 8820W Owner's Manual for further information about thermostat features.

Note: Refer to manuals for humidifier, dehumidifier, air cleaner, and ventilation products for recommended installation and operation.

Humidifier System Settings Table

System setting	Description	Factory default setting (bold) and setting range
Humidifier Installed?	Selects if a humidifier is installed. Yes/On HVAC is used for applications where the humidifier is installed on the HVAC duct. Yes/Standalone is used for application where the humidifier is independent of the HVAC system. (If set to no, no other humidifier settings will be available.)	No Yes/On HVAC Yes/Standalone
Display Buzzer?	Note: Only available if humidifier installed is set to No.	Yes No
Outdoor Temperature Sensor Installed?	Select if outdoor sensor is attached or not.	No Yes
Humidifier Mode	Selects auto or manual mode. Auto mode controls humidity based on the humidity setting and outdoor temperature. Manual mode controls humidity based on the SPS endpoint. (Auto mode is only available if outdoor sensor is set to Yes.)	Auto Manual
Allowed Humidifier Operation	Selects when humidification is allowed to occur. Heat Only allows humidification to occur when the fan is on. Forces Fan allows humidification to occur without the HVAC fan. This option should only be used when the humidifier is independent of the HVAC system. Note: Without Fan is only available when Humidifier Installed is set to Yes/Standalone .	Heat Only Forces Fan Without Fan
Humidity Deadband	CAUTION: When Humidifier Operation is set to Without Fan the thermostat will turn on humidification without energizing the HVAC fan. Do not select this option when the humidifier is installed on the HVAC duct. Without airflow moisture can accumulate in the duct resulting in significant damage.	10% 10 to 20%
Humidifier Reminder	Selects the minimum difference between the humidifier and dehumidifier setpoints. (Only available if both a humidifier and dehumidifier are installed.)	Off 30th Valve 1 per season 2 per season
Single or First Reminder Appears	Determines the month the first (or only) "Change Water Panel" message is displayed.	October December January February March April May June July August September

SETUP & TESTING

System setting	Description	Factory default setting (bold) and setting range
Second Reminder Appears	Determines the month the second "Change Water Filter" message is displayed.	October December January February March April May June July August September

SETUP & TESTING

Air Cleaning System Settings Table

System setting	Description	Factory default setting (bold) and setting range
Air Cleaner Installed?	Selects if an air cleaner is installed. (If set to No, no other air cleaner settings will be available.)	No Yes
Display Bacter?	Note: Only available if Air Cleaning installed is set to No.	Yes No
Air Cleaner Reminder	The period for displaying the "Change Air Filter" message.	Disabled Enabled
Number of Months for Recurrence	Select number of months for displaying reminder.	12 Months 1 to 12 Months

Dehumidifier System Settings Table

System setting	Description	Factory default setting (bold) and setting range
Dehumidifier Type Installed?	Selects if a dehumidifier is installed. (If set to No, no other dehumidifier settings will be available.)	None Whole Home Air Conditioner
Display Bacter?	Note: Only available if Dehumidifier installed is set to None.	Yes No
Disable Dehumidification During Cooling?	Selects if a dehumidifier is disabled during a cooling call.	Yes No
Dehumidifier Forces Fan?	Selects if dehumidification can turn on the fan.	Yes No
Dehumidifier Overcooling Limit	Selects the amount of overcooling that can occur for dehumidification. (Only available if dehumidifier type is set to Air Conditioning.)	1°F (0.5°C) 2°F 3°F (1.5°C)
Dehumidifier Reminder	The period for displaying the "Dehumidification Service Reminder" message.	Disabled Enabled
Number of Months for Recurrence	Select number of months for displaying reminder.	12 Months 1 to 12 Months
Dehumidify in Vacation Hold?	Selects if dehumidification with the air conditioner is done in vacation mode.	No Yes
Vacation Hold Low Temperature Limit	Sets the lowest temperature the air conditioner will cool to, to meet RH support in Vacation Mode. (Only available if dehumidifier type is set to Air Conditioning.)	75°F (24°C) 70 to 85°F (21 to 24.5°C)
Humidity Deadband	Select the minimum difference between the humidifier and dehumidifier setpoints. (Only available if both a humidifier and dehumidifier are installed.)	10% 10 to 20%


Fresh Air System Settings Table

System setting	Description	Factory default setting (bold) and setting range
Fresh Air Vent Installed?	Selects if ventilation is installed. (If set to No, no other ventilation settings will be available.)	No Yes
Display Bacter?	Note: only available if Fresh Air installed is set to No.	Yes No
Fresh Air Setup Type	Selects if ventilation is configured through the Code setup or Comfort. Comfort setup has more lockout options. Code setting ensures missed lockout time is made up.	Comfort Code
Number of Bedrooms	Selects the number of bedrooms to be used for the Calculated Minutes per Hour.	3 Bedrooms 1 to 10 Bedrooms
Home Size	Selects the size of the home to be used for the Calculated Minutes per Hour.	2500 SQ FT 500 to 7500 SQ FT
Measured CFM	Selects the ventilation CFM to be used for the Calculated Minutes per Hour.	110 CFM 30 to 250 CFM
Calculated Minutes per Hour	Displays the Fresh Air Time calculated.	None Range 6 to 60 Minutes
Override	Manual adjustment of Calculated Minutes per Hour.	(Calculated Minutes per Hour) Range 9 to 60 Minutes
Outdoor Temperature Sensor Installed?	Select if outdoor sensor is attached or not.	No Yes
Enable High Vent RH Limit	Selects if ventilation is disabled if the indoor RH exceeds the indoor RH limit. (Only available if Fresh Air Setup is set to Comfort.)	Yes No
High Vent RH Limit	Sets the ventilation indoor RH lockout limit. (Only available if Enable High Vent RH Limit is set to Yes.)	55% 45% to 70%
Enable Low Vent RH Limit	Selects if ventilation is disabled if the indoor RH exceeds the indoor RH limit. (Only available if Fresh Air Setup is set to Comfort.)	No Yes
Low Vent RH Limit	Sets the ventilation indoor RH lockout limit. (Only available if Enable Low Vent RH Limit is set to Yes.)	20% 10% to 30%
Enable High Vent Temperature Limit	Enables high ventilation temperature lockout limit. (Only available if Outdoor Sensor is set to installed.)	No Yes
High Vent Temperature Limit	Sets high ventilation temperature lockout limit. (Only available if Enable High Vent Temperature Limit is set to Yes.)	101°F (38°C) 85°F to 105°F (29°C to 41°C)

System setting	Description	Factory default setting (bold)	and setting range
Enable Low Vent. Temperature Limit	Enables low ventilation temperature lockout limit. (Only available if Outdoor Sensor is set to installed.)	No	Yes
Low Vent. Temperature Limit	Sets low ventilation temperature lockout limit. (Only available if Enable Low Vent. Temperature Limit is set to Yes.)	10°F (-12°C)	-10°F to 40°F, (24°C to 6°C)
HVAC Fan with Vent	Selects if ventilation forces the fan on. Yes with high and low limits is only available if Outdoor Sensor is set to installed.	Yes	Yes with high and low limits No
Enable High Mixing Temperature	Enables high mixing temperature. (Only available if HVAC Fan with Vent is set to Yes with high and low limits.)	No	Yes
High Mixing Temperature	Sets the high mixing temperature. (Only available if Enable High Mixing Temperature is set to Yes.)	80°F or (26°C)	60°F to 105°F, (14°C to 41°C)
Enable Low Mixing Temperature	Enables low mixing temperature. (Only available if HVAC Fan with Vent is set to Yes with high and low limits.)	No	Yes
Low Mixing Temperature	Sets the low mixing temperature. (Only available if Enable Low Mixing Temperature is set to Yes.)	40°F (6°C)	0°F to 80°F, (-18°C to 12°C)
Fresh Air Service Reminder	The period for displaying the "SERVICE FRESH AIR" message.	OFF	1 to 12 months or "OFF" to disable

INSTALLER SYSTEM TEST


The Installer Test can be accessed from the Installer Menu. All equipment outputs that are configured in the installer settings can be turned on and off for testing equipment. Minimum on and off times are not enforced while in this mode.

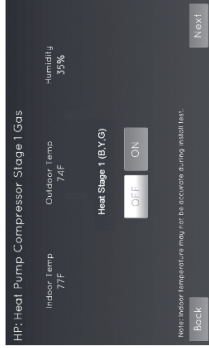

WI-FI SETUP


For detailed instructions for connecting the thermostat to a Wi-Fi network and registering it to an Apriliaire account, refer to the Wi-Fi Quick Start Guide included in the box.

HOME SCREEN

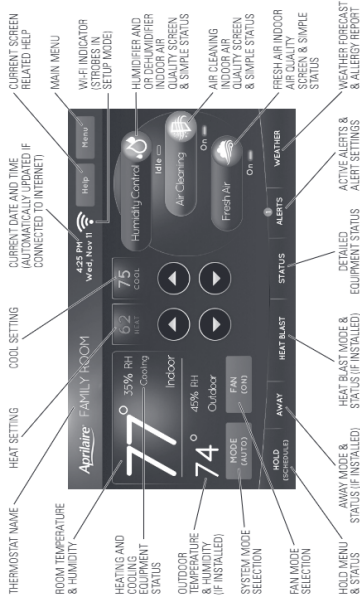

NOTE: SCREEN BRIGHTENS AFTER TOUCH

MAIN MENU

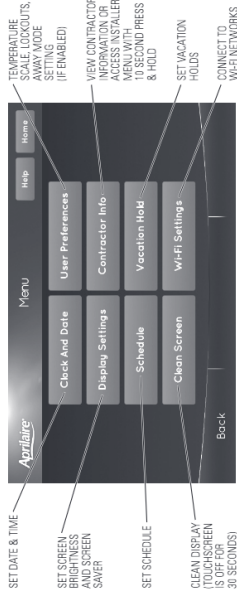

QUICK REFERENCE TO CONTROLS & DISPLAY

INSTALLER MENU



EQUIPMENT CONTROL MODULE LEDs

POWER/STATUS – On solid during normal operation. Flashes when connection to the thermostat is lost and at power-up while the thermostat connection is being established.

HEATING – On when heating outputs are active.

COOLING – On when cooling outputs are active.

FAN – On when fan output is active.

HUMIDIFIER – On when humidifier output is active.

DEHUMIDIFIER – On when dehumidifier output is active.

VENTILATION – On when ventilation output is active.

AIR CLEANING – On when air cleaner output is active.



THERMOSTAT FEATURES

- Remote access and control over Wi-Fi.
- Indoor air quality control.
 - Humidification automatic or manual control.
 - Dehumidification.
 - Event-Based™ air cleaning.
 - Ventilation with temperature and humidity limits.
 - Temperature control.
- Heat-Blast® raises the room temperature 3°F to 5°F.
- One touch Away.
- Support for optional wireless outdoor temperature sensor.
- Large touch screen with adjustable backlight.
- 7 day programmability.

TROUBLESHOOTING

DISPLAY IS BLANK

If Power LED is not illuminated at the equipment control module check the following:

- Check circuit breaker and reset if necessary.
- Make sure power switch at heating & cooling system is on.
- Make sure furnace door is closed securely.

HEATING SYSTEM DOES NOT RESPOND ("HEATING" APPEARS ON SCREEN)

- Check for 24VAC at the equipment on the secondary side of the transformer between power and common. If voltage is not present, check the heating equipment to find the cause of the problem.
- Check for 24VAC between the heat terminal (W) and the transformer common. If 24VAC is present, the thermostat is functional. Check the heating equipment to find the cause of the problem.
- Check for loose or broken wires between the thermostat and the heating equipment.

COOLING SYSTEM DOES NOT RESPOND ("COOLING" APPEARS ON SCREEN)

- Check for 24VAC at the equipment on the secondary side of the transformer between power and common. If voltage is not present, check the cooling equipment to find the cause of the problem.
- Check for 24VAC between the cooling terminal (Y) and the transformer common. If 24VAC is present, the thermostat is functional. Check the cooling system to find the cause of the problem.
- Check for loose or broken wires between the thermostat and the cooling equipment.

FAN DOES NOT TURN ON IN A CALL FOR HEAT

- Check Installer Setting **Fan Control In Heating / Heat Pump Auxiliary Type**, to make sure the fan control is properly set to match the type of system.

HEAT PUMP ISSUES COOL AIR IN HEAT MODE, OR WARM AIR IN COOL MODE

- Check wiring at the terminal block to confirm the reversing valve is connected to the proper terminal. O is active in cooling and B is active in heating.

HEAT/COOL BOTH ON AT SAME TIME

- Check Installer Setting **Equipment Type**, to make sure it is set to match the installed heating/cooling equipment.
- Check to make sure heating and cooling wires are not shorted together.

HEATING EQUIPMENT IS RUNNING IN COOL MODE

- Check Installer Setting **Equipment Type**, to make sure it is set to match the installed heating/cooling equipment.

"HEATING" IS NOT DISPLAYED

- Check Installer Setting **Control Setup** is set correctly.
- Change the System Mode to Heat, and set the temperature level above the current room temperature.

"COOLING" IS NOT DISPLAYED

- Check Installer Setting **Control Setup** is set correctly.
- Change the System Mode to Cool, and set the temperature level below the current room temperature.

SPECIFICATIONS

Environment	
Temperature (shipping)	-30° to 150°F (-34° to 65°C)
Temperature thermostat (operating)	32° to 120°F (0° to 48°C)
Temperature equipment control module (operating)	32° to 158°F (0° to 70°C)
Relative humidity	Operating: 5% to 90% R.H. (non-condensing)

Electrical	
Operating voltage	24VAC (18 – 30VAC)
Current	Maximum: 2.5A (total), 1.0A (single output) Maximum surge current: 5A

Control	
Outdoor, Remote, Leaving and Return temperature sensor	Maximum distance: 300 feet
Room temperature measurement	Display range: 32° to 99°F (0° to 40°C)
Return and Leaving temperature measurement	Display range: -40° to 160°F (-40° to 71°C)
Outdoor temperature measurement	Display range: -40° to 130°F (-40° to 55°C)
Setpoint temperature range	Heat: 40° to 90°F (4° to 32°C) Cool: 50° to 99°F (10° to 37°C)
Setpoint humidity range	Humidification: 10% to 50% R.H. Dehumidification: 40% to 90% R.H.

AprilairePartners.com
 P.O. Box 1467
 Madison, WI 53701-1467
 800.334.6011 F: 608.257.4357
 U.S. Patent Numbers 8,146,376, 8,596,078 and other patents pending
 ©2018 Aprilaire – Division of Research Products Corporation

Aprilaire®