

CATALOG NUMBER

ECPLD1

electriCenter
ACCESSORIES

1" Wide - Padlocking Device

This kit fits SIEMENS and MURRAY breaker types:

BAF, BAFH, BE, BLE, BLEH, BLF, BLHF,
BQ, BQHF, BQAF, BQAFH, BQH, BQP, HBQ,
HQP, MH-T, MP-AT, MP-ET, MP-GT, MP-HAT,
MP-HET, MP-HGT, MP-HT, MP-MT, MP-T,
QAF, QAFH, QE, QEH, QG, QP, QPF, QPH,
QPHF, QT.

Package contains 3 devices.



40783643454826

Same As: ■ PLD1

INSTALLATION INSTRUCTIONS




⚠ DANGER

Hazardous Voltage.
Will cause death,
serious injury or substantial
property damage.

Turn off power supplying this
equipment before working inside.

⚠ SAFETY INSTRUCTIONS

Note: This instruction outlines the
recommended installation procedure.

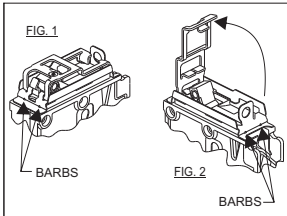

1. Turn off and lock off the power supplying this enclosure before working inside.
2. To install, press the padlocking assembly onto the circuit breaker (Fig.1). (The barbs on the lock mount will cause this to be a snug fit).
3. The circuit breaker can be locked in the "OFF" or "ON" position. Once the padlocking assembly is installed, the lock plate must be

© 2007 Copyright Siemens Industry, Inc.

600635A Rev.X

Siemens Industry, Inc. Norcross, Georgia U.S.A. Assembled in Mexico

PART NO. 600635A